

400 Wide Mat or Low Speed 800 Wide Mat			SPREADING TABLES											Spread Widths In Metres Centre to Centre												
All Rates In Kilograms Per Hectare.			Door Settings 1 to 20 (Read from Ruler Level/Top of the Back Door Tab). Check Fertiliser Densities with Manufacturer																							
	Urea			Sulphate of Ammonia			DAP			Superphosphate			Serpentine Super			Dolomite			React Rock (Sechura)			Lime				
	Density 0.77 t/cubic m			Density 1.0 t/cubic m			Density 1.1 t/cubic m			Density 1.2 t/cubic m			Density 1.3 t/cubic m			Density 1.4 t/cubic m			Density 1.5 t/cubic m			Density 1.6 t/cubic m				
	15	17.5	20	12.5	15	17.5	15	17.5	20	15	17.5	20	15	17.5	20	15	17.5	20	15	17.5	20	10		N/A	10	N/A
Spread Width in M			Spread Width in M			Spread Width in M			Spread Width in M			Spread Width in M			Spread Width in M			Spread Width in M			Spread Width in M			Spread Width in M		
20	905	776	679	1499	1249	1071	1374	1178	1030	1499	1285	1124	1624	1392	1218	1954	1675	1466	3141				3350		20	
19	860	737	645	1424	1186	1017	1305	1119	979	1424	1220	1068	1542	1322	1157	1857	1591	1392	2984				3183		19	
18	815	698	611	1349	1124	963	1236	1060	927	1349	1156	1012	1461	1253	1096	1759	1508	1319	2827				3015		18	
17	769	659	577	1274	1062	910	1168	1001	876	1274	1092	955	1380	1183	1035	1661	1424	1246	2670				2848		17	
16	724	621	543	1199	999	856	1099	942	824	1199	1028	899	1299	1113	974	1563	1340	1173	2513				2680		16	
15	679	582	509	1124	937	803	1030	883	773	1124	963	843	1218	1044	913	1466	1256	1099	2356				2513		15	
14	634	543	475	1049	874	749	962	824	721	1049	899	787	1137	974	852	1368	1173	1026	2198				2345		14	
13	588	504	441	974	812	696	893	765	670	974	835	731	1055	905	792	1270	1089	953	2041				2178		13	
12	543	465	407	899	749	642	824	707	618	899	771	674	974	835	731	1173	1005	879	1884				2010		12	
11	498	427	373	824	687	589	756	648	567	824	707	618	893	765	670	1075	921	806	1727				1843		11	
10	453	388	339	749	624	535	687	589	515	749	642	562	812	696	609	977	838	733	1570				1675		10	
9	407	349	305	674	562	482	618	530	464	674	578	506	731	626	548	879	754	660	1413				1508		9	
8	362	310	272	599	500	428	550	471	412	599	514	450	649	557	487	782	670	586	1256				1340		8	
7	317	272	238	525	437	375	481	412	361	525	450	393	568	487	426	684	586	513	1099				1173		7	
6	272	233	204	450	375	321	412	353	309	450	385	337	487	418	365	586	503	440	942				1005		6	
5	226	194	170	375	312	268	343	294	258	375	321	281	406	348	304	489	419	366	785				838		5	
4	181	155	136	300	250	214	275	236	206	300	257	225	325	278	244	391	335	293	628				670		4	
3	136	116	102	225	187	161	206	177	155	225	193	169	244	209	183	293	251	220	471				503		3	
2	91	78	68	150	125	107	137	118	103	150	128	112	162	139	122	195	168	147	314				335		2	
1	45	39	34	75	62	54	69	59	52	75	64	56	81	70	61	98	84	73	157				168		1	
<b>Door Settings</b>																						<b>Door Settings</b>				
<b>Door Setting Instructions</b>																										
Step 1. Select the product to be spread at the top of the chart e.g. Superphosphate with a density of 1.2 tonnes per cubic metre																										
Step 2. Select the spread width for the product either 15,17.5, or 20 metre centres e.g. 15 metre centres																										
Step 3. Follow this column down to select spreading rate required in kilograms per hectare e.g. 300 kg/h																										
Step 4. Now Follow row across to find door height setting on left or right columns e.g. no. 4 Set door height																										